




Press and hold **Esc + Reload** keys, then tap the **Power** button (located on the right side of the Chromebook)

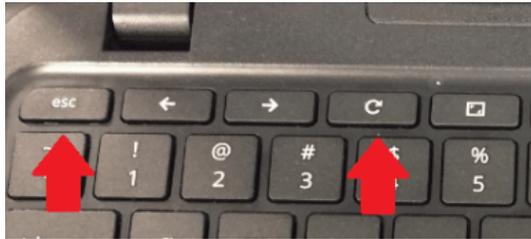


The Chromebook should start up and show the following screen. If not, try the **Esc + Reload + Power** button sequence again.

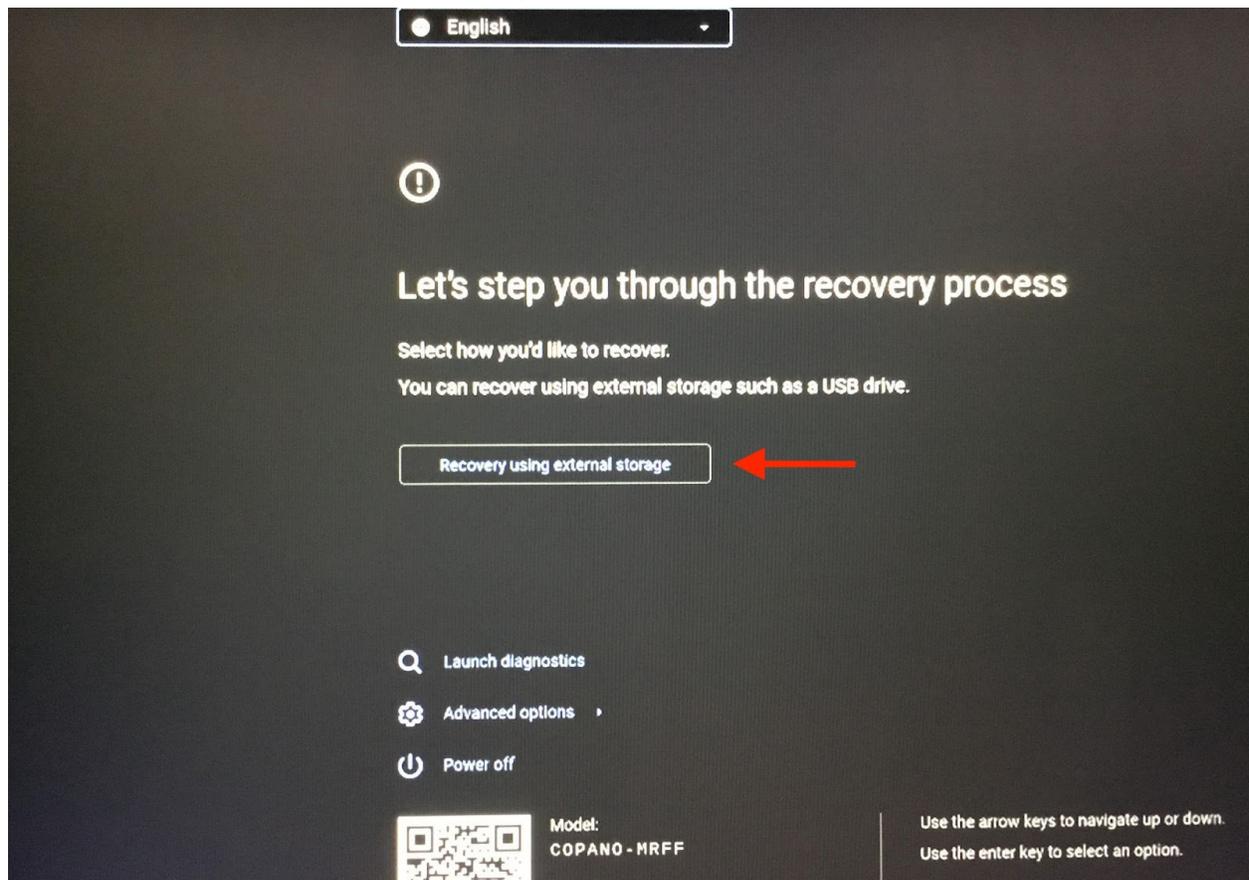


Use the **down arrow key** to navigate to **Advanced options** and press **Enter**

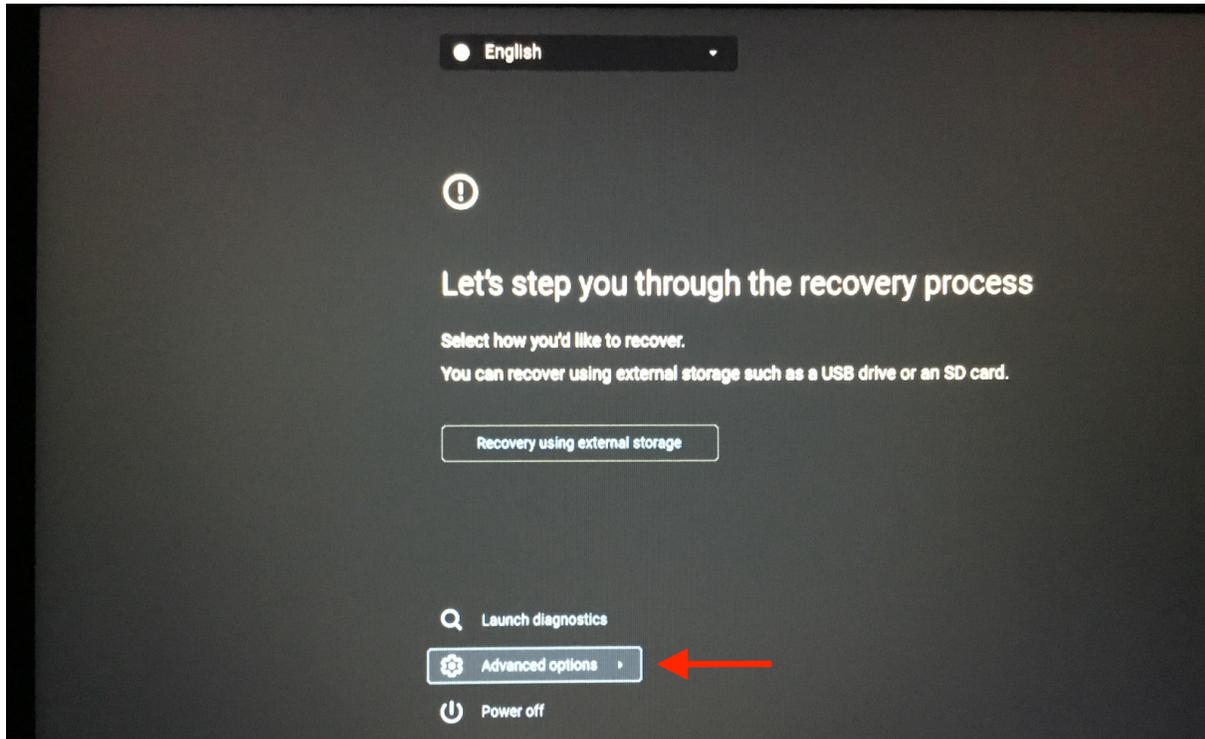


On **Advanced options** screen, **Enable developer mode** should be highlighted. Press **Enter**

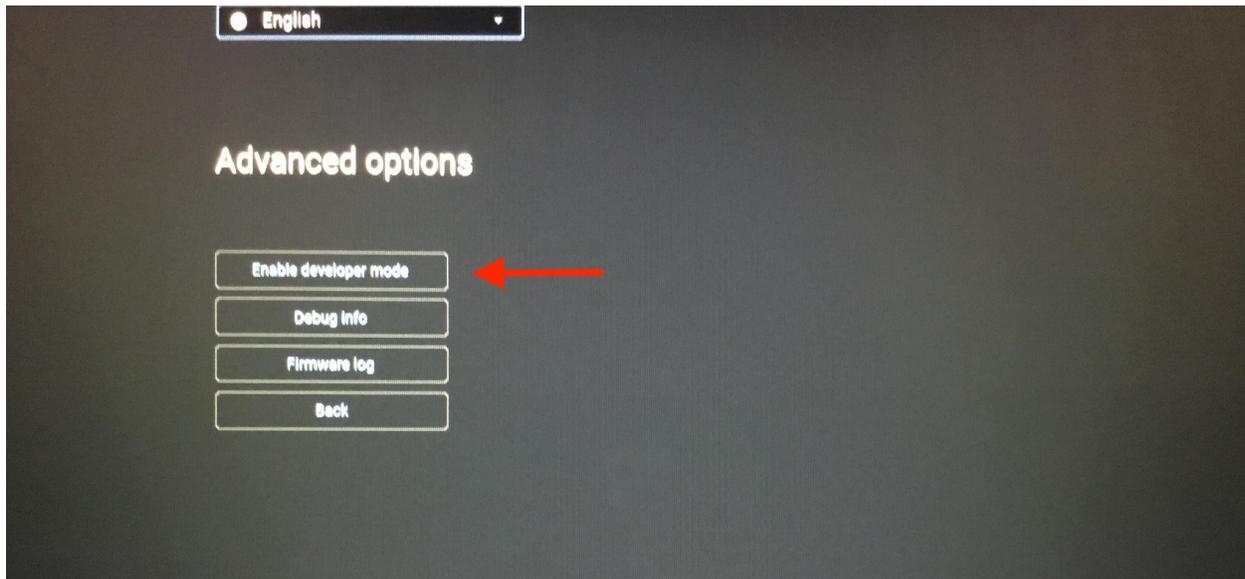


On the next screen, **Confirm** should be highlighted. Press **Enter**

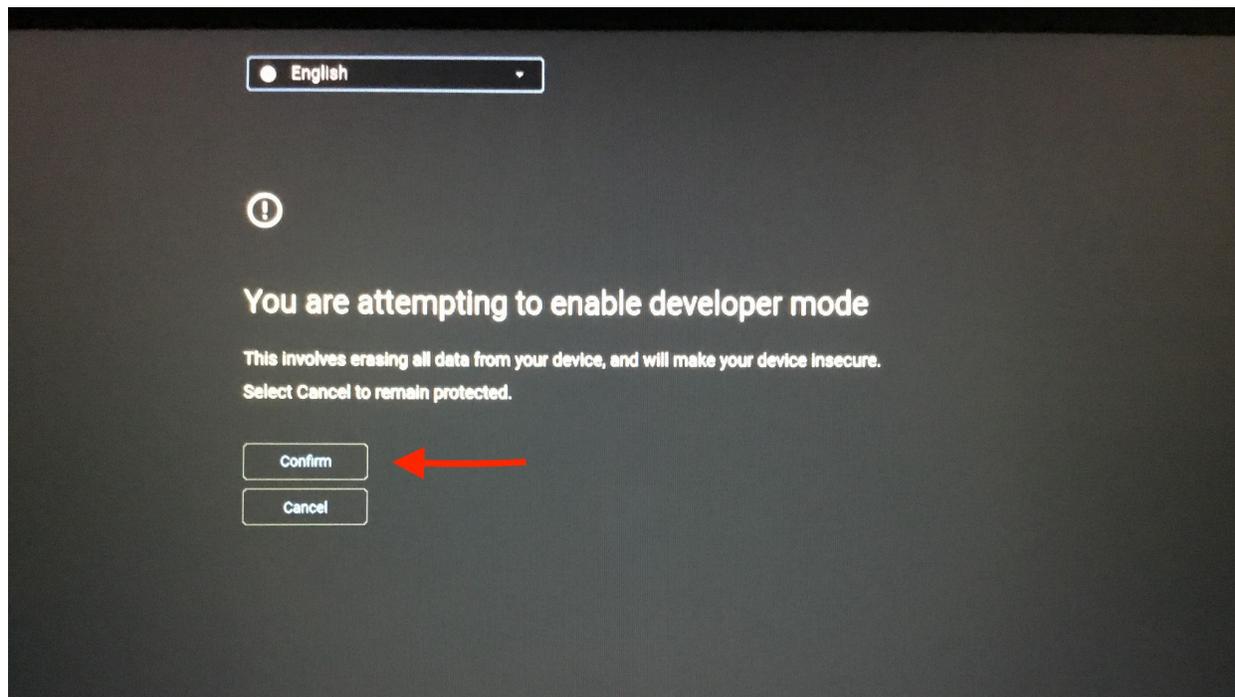


The screen may go dark for a moment. The next screen that will ask you to **Confirm returning to Secure Mode**. Press **Enter**

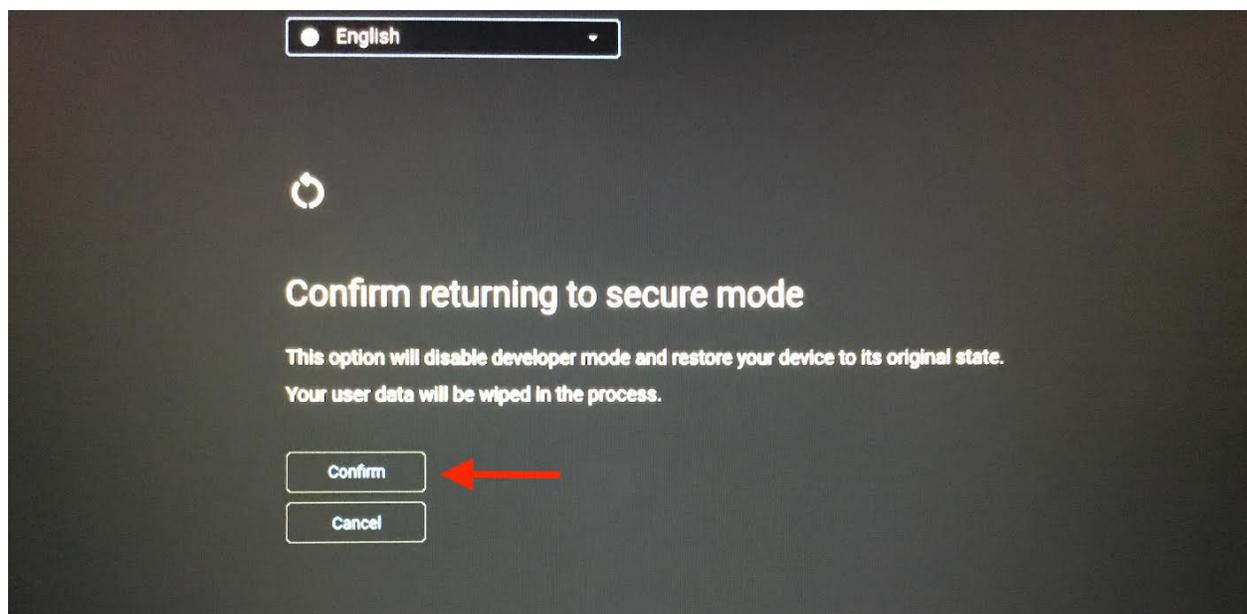


The Chromebook will reboot. Click **Get Started** when the next screen appears

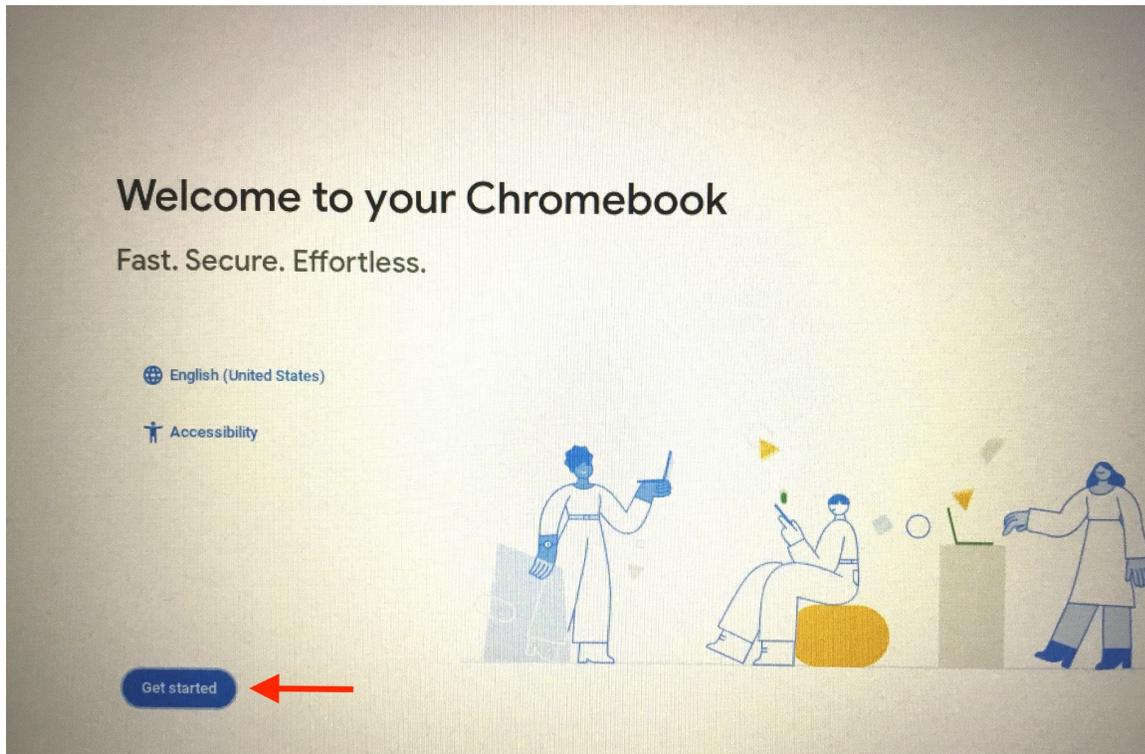

Choose a network to continue. If you are in the district, you can use **"GSD-Public"**

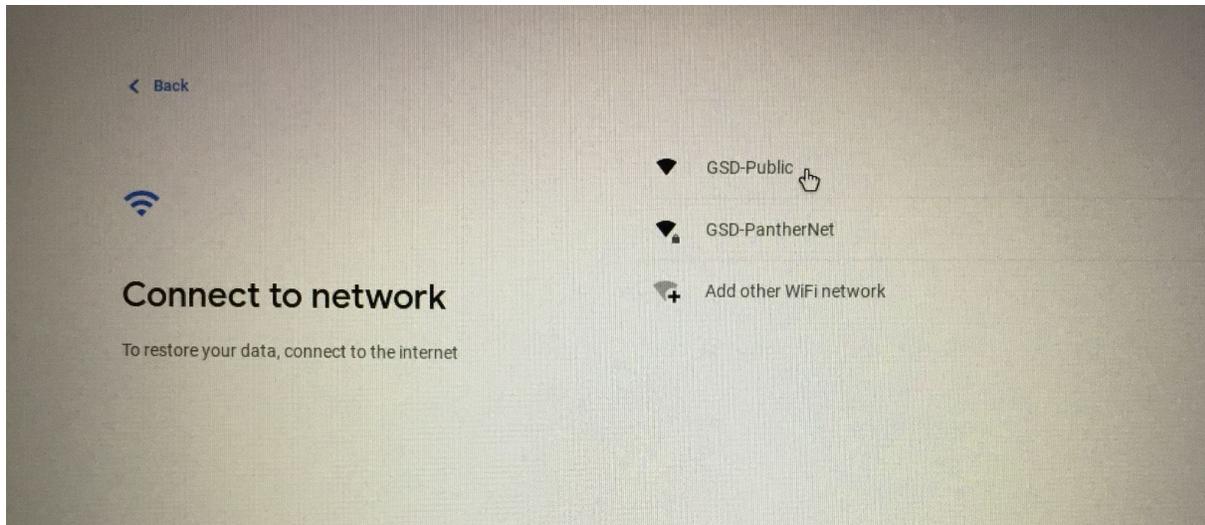

When the following screen appears, click **Done**

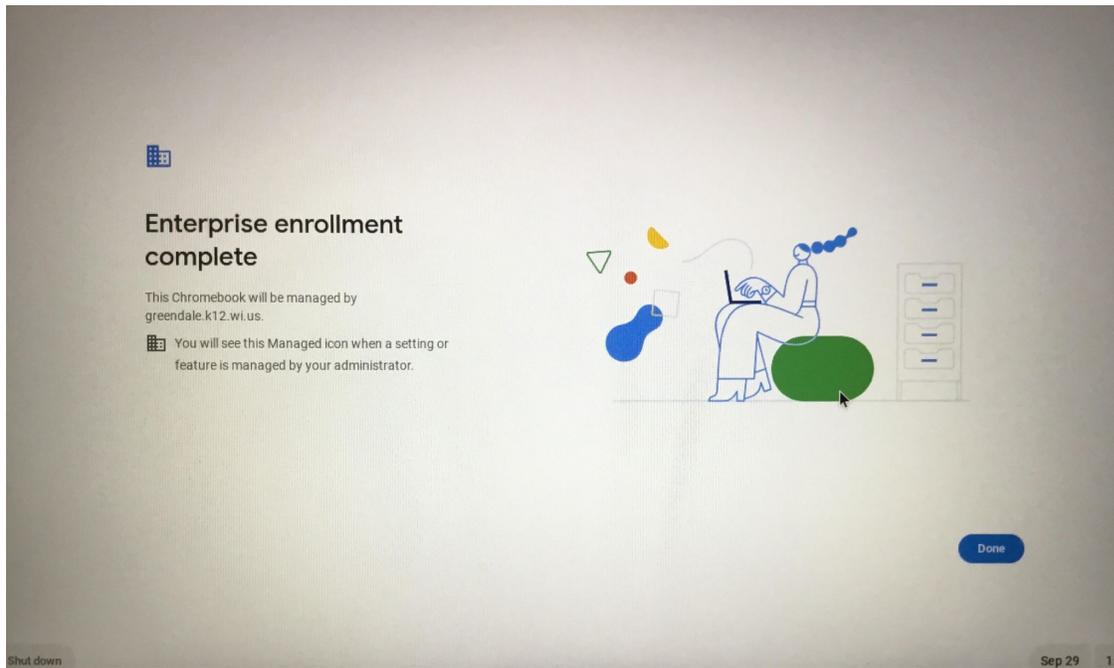

Revised 9/23